




Hoggi Bingo Evolution Respiratory Equipment Tray Instructions US3239-vent

The respiratory equipment tray for the Hoggi Bingo Evolution has been designed to fit only on the Size 2 Evolution Chassis with the Complex Respiratory Modification (3239-1006-024). This chassis is a modified Bingo Evolution Size 2 that has a lower front horizontal cross bar, extended length push handle, hand operated drum brakes and a steel reinforced axle to provide a 154 lb (70 kg) total chassis weight capacity. **IMPORTANT: This respiratory equipment tray has not been crash tested and it is not recommended for occupied transportation use.**

Assembly:

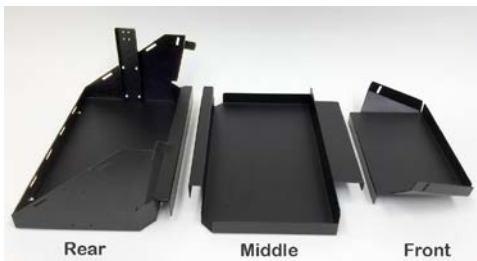

1) The respiratory equipment tray is three separate pieces that can be used in various combinations or as a complete system. The Middle portion hangs on the two chassis cross bars. The Front portion bolts onto the Middle portion with supplied #10-32 3/8" socket head cap screws. The Rear portion hangs on top of the Middle Portion across the same rear chassis crossbar and is additionally reinforced with supplied "D" ring straps for support.



2) Place the Front tray on top of the wider edge of the Middle tray. The Front tray has two pre-drilled holes. The Middle Tray has two matching threaded inserts. Use the supplied #10-32 x 3/8" socket head cap screws and lock washers to bolt the two sections together. The front section of the tray will remain suspended between the two front casters. Slots in either "wing" are supplied for optional strap reinforcement as deemed necessary by the user.




3) TILT OR REMOVE THE SEATING SYSTEM. The image to the left shows the chassis with the seating system removed for clarity. Place the tray on the ground behind the rear wheels. Roll the stroller backwards while lifting the rear cross bar over the front section of the tray.



4) Pull the front of the tray up and over the front crossbar. Hook the back of the middle section over rear cross bar.



5) OPTIONAL: Install the "LTV Tower" on either side with of the rear tray with the supplied #8-32 x 3/8" screws (4). The "LTV Tower" is pre-drilled and threaded for the dovetail wall mount (not Included but pictured below).

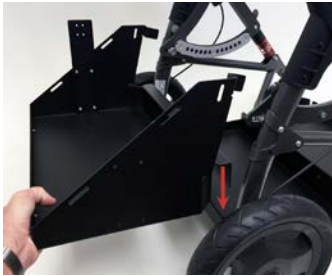


6) Hang the Rear tray section on the rear crossbar ON TOP OF THE MIDDLE SECTION. Press down firmly on the crossbar to make sure the Top section seats securely and evenly OVER the Middle section.



7) Locate the top / front slot next to the "Z" shaped padded flange. Slide the Velcro "D" ring strap thru slot making sure to leave the ring on the inside of the tray.



8) Loop the strap around the oval rear upright and below the round horizontal strut. Loop the strap thru the "D" ring and secure snugly back to itself with the velcro.

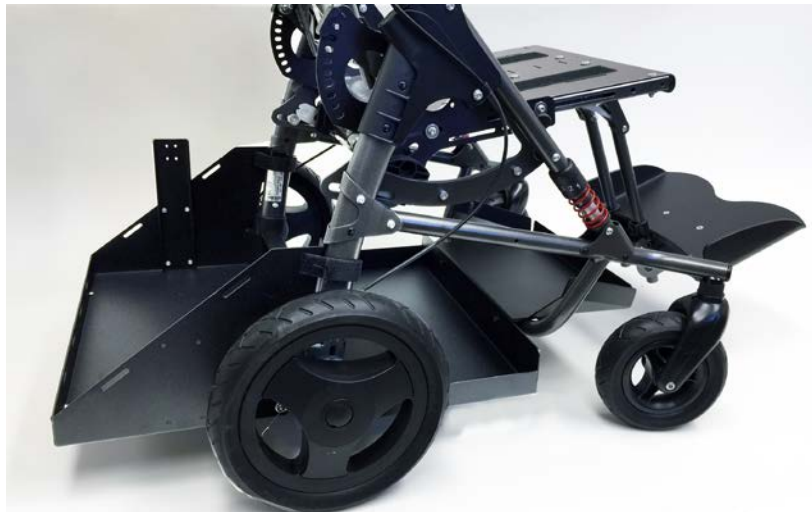

For more information, please contact:
Adaptive Imports, LLC
2744 Circleport Dr. Erlanger, KY 41018 (877) 767-9462
sales@adaptiveimports.com